



VALVE FUNCTION

- Maintain constant upstream pressure (inlet to valve) by relieving excess pressure
- Solenoid provides electrical on/off override of relief/sustaining function

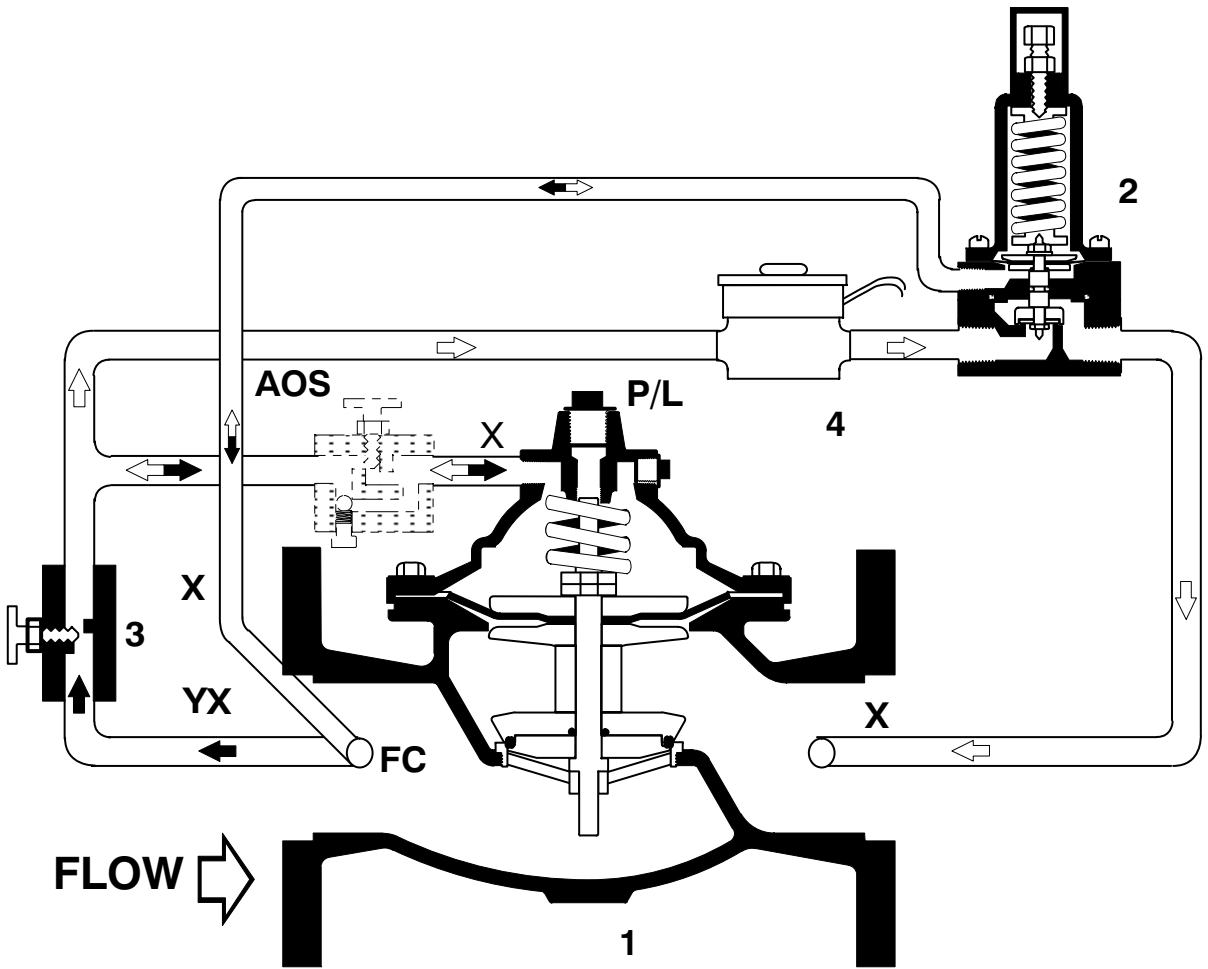

Flow Direction Shown: Under the Seat
Optional "R" Flow Over the Seat: 116-31R/6116-31R

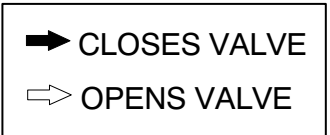

COMPONENTS

- 1 - Main Valve
- 2 - PV20 Sustaining Control
- 3 - Needle Valve -
Adj. Restriction - Closing
- 4 - 2-Way Solenoid

ACCESSORIES

Located as indicated
Included as marked

- | | |
|--|--------------------------|
| | AOS - Adj. Opening Speed |
| | X - Isolation Cocks |
| | Y - Y-Strainer |
| | P - Position Indicator |
| | L - Limit Switch |
| | FC - Flo-Clean Strainer |